

muzili


Smart Nutrition Coffee Scale

USER MANUAL




1. Features

- 1-1. Default unit: g
- 1-2. Switch button: ON/TARE
- 1-3. Power: 2 x AAA batteries
- 1-4. Auto off time : about 60s
- 1-5. Manual off : press on button ON/TARE for 2s
- 1-6. Minimal weight: 5g
- 1-7. Capacity: 5000g
- 1-8. Overload value: 5060g
- 1-9. Unit conversion: press UNIT to change, g-lb-oz-ml
- 1-10. Graduation: 1g, 0.1 lb:oz, 0.05oz, 1ml
- 1-11. Power on display: turn to zero, 0g
- 1-12. No weight display: 0g-0:0.0lb:oz-0.00oz-0ml
- 1-13. Overload indication: 
- 1-14. Low voltage indication: lower than 2.6V indicated with , lower than 2.5V indicated with 
- 1-15. Weight unstable indication: 
- 1-16. Negative weight indication: indicate actual negative weight.

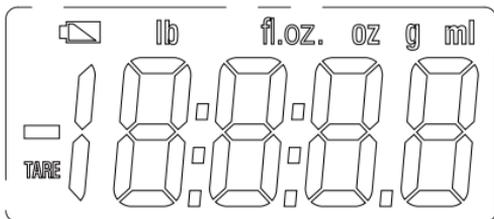


2. Unit Conversion

- 2-1. When power on, the default unit is g.
- 2-2. If the user needs to switch the unit, press button ON/TARE to turn on the scale, then press UNIT button to change, g=>lb:oz, lb:oz=>oz, oz=>ml, ml=>g

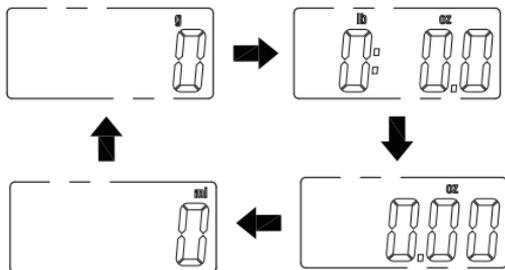

3. Weighing Operation


3-1. Firstly put the scale on flat and hard surface, press ON/TARE button to turn on the scale, return to zero after full display.




3-2. Put the object on the scale, the LCD indicates the weight of the object; press TARE button.



3-3. Continuously put on objects, it indicates the weight of the last object.



3-4. Take off all the objects, it indicates the actual negative weight, press ON/TARE to return to zero.




4. Sign Tips


4-1. When the voltage of the battery is low it indicates below:




4-2. When the voltage of the battery is low and the scale fails to work, it indicates below.



4-3. Unstable zero indication: If the "unSt" symbol is displayed on the LCD screen, it means that the weight on the scale is not stable, or that the scale is not placed on a hard, level and flat surface. Place the scale on a flat stable surface and try again.



4-4. Overload indication:



5. Reminder

5-1. Ensure the scale is on a flat, smooth and firm surface.

5-2. This scale is not waterproof. Do not expose to moisture.

5-3. Clean the scale slightly with a damp cloth. Do not use any chemical/abrasive cleaning agents to clean the scale.

5-4. Please remove the battery if the scale is not to be used for a long time.

Bluetooth function:

APP Name: AiFresh



Bluetooth specifications

Bluetooth version: 4.0

System requirement:

- 1) Android: above version 4.3
- 2) iOS: above version 7.0

App photos:

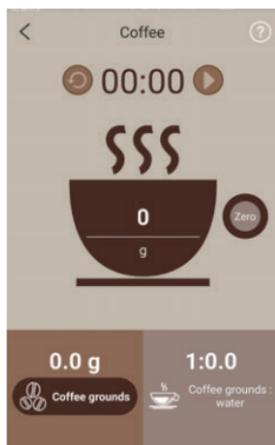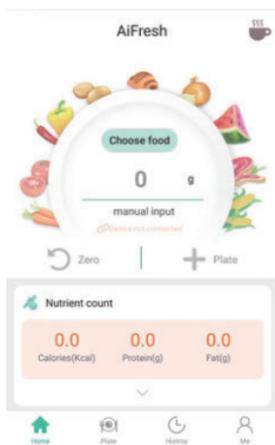

Download the APP:

1) QR CODE:



Scan above QR Code to download the APP; It is compatible for both Android and iOS;

2) Android system: Google play -- key word: AiFresh

IOS system: APP store -- key word: AiFresh

App Operation

1) After finished the installation for the APP, system will remind you to open the Bluetooth function firstly when you open the iFresh APP;

2) For your first time use of the APP, it will show the personal data page, including the age, height, weight and etc; It is better to input your correct info, so that APP can provide the correct target info to you according to your personal data;

If you forget to fulfill the data at first time, you can update the info via Memu <Me>;




3) Weighing & Nutritional content analyzer

Connection:

Turn on the Bluetooth function of your smartphone and open the APP, then press ON/TARE button to turn on the scale; when the color of weight digits turns green, it means that the APP has been connected with the scale successfully.

Weighing:

After connected with the scale, you can weigh the food as you wish;

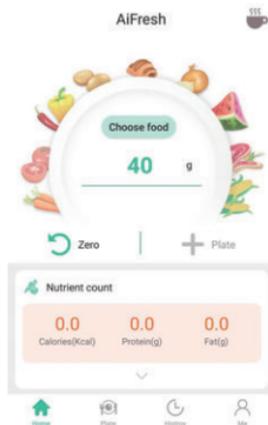


More functions:

1) Choose food code

Touch "PLEASE CHOOSE FOOD", you will enter the food code list part;

For the food code, you can search the food via input the food name, also can search it via food catalogue;

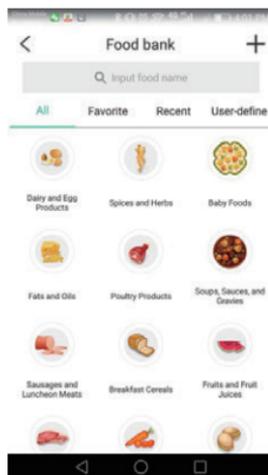

When you search out the food you need, you can touch the heart shape, make it in red color, that you can add it to your favorite, then you search it out faster next time;





Also you add the food you need once the food is not in our system list;



2) Show the Nutritional composition data


After your weighing, and selected the food code info, the APP will show the nutritional composition data to you, including Calories, Protein, Fat, Carbohydrate, Dietary Fiber, Vitamin A, Carotene and etc, total 24 kinds of nutritional composition data, you can slide down to check more info;

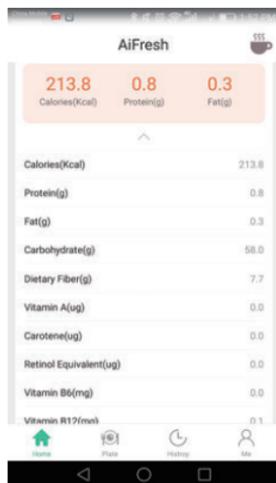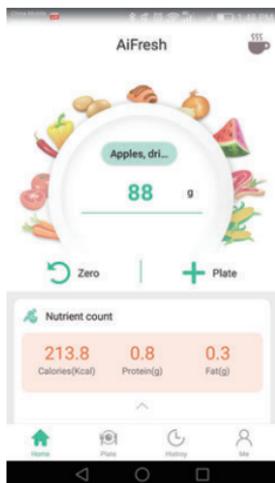

3) Zero/Tare function

You can use scale button ON/TARE for Tare function;

Also you can use APP button Zero for Tare function;


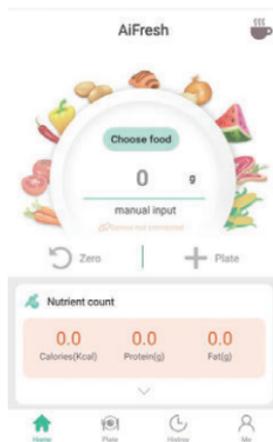


4) Coffee maker

This APP have the coffee maker function, which can help you to DIY coffee by yourself;



Step 1: Use the scale to weigh the coffee beans first, you also can input the weight of the coffee beans if not connected to the scale; then press the button Coffee in the left bottom side, the weight will be shown for coffee beans; Press the Zero button;

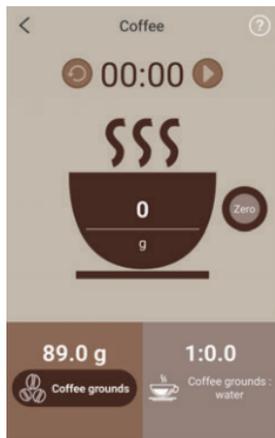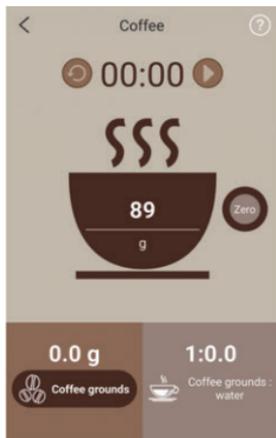

Step 2: Add water into the coffee beans, APP will show the ratio between coffee beans and water;

You can match the ratio according to your favorite;

Tips: The advised ratio between coffee bean and water is 1:13 - 1: 23;



Step 3: After confirming the ratio for coffee bean and water, press the time to start calculating the time;

Tips: The advised time for coffee maker is between 2 min to 3 min;
And the water temperature is advise between 85-90 degree;

5) Catering

AiFresh APP can provide the Catering function;

After weighing the food, you can press Join to join the food to your catering;

6) Record

You can check the record for the food you add;

7) Me

You can fulfill the personal data, also can change the unit for weighing, and APP info in this page;

Customer Service

30 days no-reason return guarantee

For 30 days after the date of purchase, return your undamaged Muzili product and you will receive a full refund for ANY reason.

18 months worry-free quality warranty

We take care of all quality-related issues with a REPLACEMENT OR FULL REFUND within 18 months.

Reminder: Be sure to use your product as directed.

Free user support

Not sure how to use Muzili products? Contact our world-class, friendly support team for quick solutions at muzilicares@outlook.com.

Customer questions & answers

Q: Can I add the food into the app without the scale?

A: Please be kindly noted that the latest version of AiFresh app allows you to add the food manually, which means you can add food without putting on the scale.

Q: How can 2 people use the scale on their own phones with their own diaries? Or can only 1 person use it with the app?

A: This scale can be used by multiple devices. Please make sure the Bluetooth has been turned off before connecting the new devices.

Q: Is there a bowl made specific for this scale for fluids?

A: You can use any bowl, just place the bowl on the scale, tare it and then add the fluids and change the unit to oz.

Q: When I turn on the bluetooth, what am I looking for to pair?

A: It will be connect automatically when you use "AiFresh" App.